

NDI Authorization and Activation Guide (PKC4000)

Authorization Process Overview

Export the device authorization request file → Send it to the manufacturer/distributor to generate an authorization key → Import the key to complete activation

Step 1: Export Authorization Request File

- 1) On the controller, check the device system information to find its IP address: System → Net.
- 2) Enter the IP address in a web browser on your PC and log in to the web management interface (default username: admin / password: admin).
- 3) In the web interface, go to: System Settings → NDI → [Generate Key]. Export the authorization request file (e.g., NDIapply.key or ApplyAuthorization_0.key).
- 4) Send the exported file to the manufacturer/distributor to obtain the authorization key (CertificationKey.data).
- 5) The manufacturer/distributor will return a unique authorization key (CertificationKey.data), which is bound exclusively to the current device.

Step 2: Import Authorization Key to Activate

- 1) In the web interface, go to: System Settings → NDI → [Authorization]. → Upload the CertificationKey.data file and click Start.
- 2) Restart the controller. If the NDI option appears when you press the SEARCH button, the activation is successful.